



## AR-S AMERICAN RUNNER STAINLESS RUNNING BOARD

### Part #: 128072S VEHICLE BRACKETS CONFIGURATION (03/2009)

#### USE BRACKET# 1,2,3 FOR:

##### Chevy/GMC

02-08 Trailblazer / Envoy (short wheel base)

91-02 Jimmy/S10 Blazer 4Dr

02-07 Trail Blazer Short Wheel Base

92-99 Blazer Full Size 2 Dr/ Tahoe 2 Dr/Yukon 2Dr (w/o passenger side A/C lines)

##### Ford

97-03 F-150 2Dr, 3Dr, 4 Dr Suicide Super Cab

97-98 F-250 Super Cab


##### Isuzu

05-08 Ascender 5-passenger

##### Oldsmobile/Pontiac

98-05 Bravada

02-06 Montana Regular

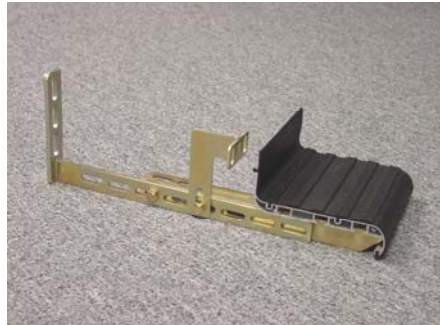

---

#### USE BRACKETS# 1,2,5 FOR:

##### Chevy/GMC

92-99 Full Size Blazer 2Dr/Tahoe 2Dr/Yukon 2Dr (w/ passenger side A/C lines) \* Bend pinch weld vertically to gain 1/2" of mounting space for bracket#5.



**Dodge**

97-06 Dakota Club Cab (w/o flares)

**Ford**

95-01 Explorer 4Dr (w/ cladding)

**Honda/Acura/Isuzu**

94-04 Passport/Rodeo/SLS *\*Requires trimming bracket#2 to length. Mount bracket#5 on outside pinch weld.*



Picture shown above is the underside of a 1999 Passport driver side.

**Hummer**

06-08 H3 SUV

**Jeep**

07-09 Wrangler Unlimited 4Dr

**Kia**

03-08 Sorento

**Land Rover**

92-02 Range Rover

06-09 Range Rover Sport

**Lexus**

03-09 GX-470

98-09 LX-470/570

**Lincoln**

07-08 MKX

**Mazda**

91-94 Navajo 4Dr (w/ cladding)

## Mercedes Benz

98-05 ML Class \*Mark & trim under seal plastic to install bracket#5 vertically. Extend bracket#2 to the main frame then mark and drill hole to secure bracket. Repeat procedure for the remaining brackets.



Driver side brackets config shown for 2001 ML320.

## Mercury

02-06 Mountaineer (w/ cladding)

## Mitsubishi

03-09 Outlander (w/o cladding) \*Required to trim bracket to fit.

## Nissan

03-09 Murano

08-09 Rogue

## Saturn

07-08 Vue

## Toyota

03-08 4Runner

08-09 Highlander

98-09 Landcruiser

95-98 T-100 Extended Cab

00-06 Tundra Access Cab (w/o flares)

2009 Venza



Configuration to mount on outside pinch weld.