



AMERICAN RUNNER RUNNING BOARD

Part #: 128078 VEHICLE BRACKET CONFIGURATION (03/2009)

USE BRACKET#1,2,3 FOR:

Buick


04-07 Rainier

Chevy/GMC/Cadillac

02-09 Escalade ESV/ESV

00-09 Tahoe/Yukon

99-09 Yukon Denali

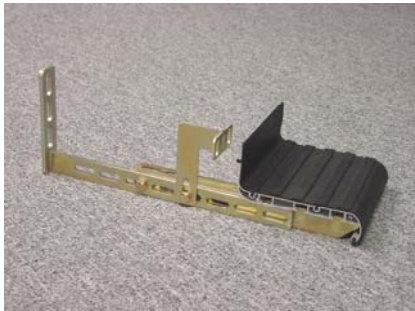

Optional configuration using bracket#4.

Using bracket#4 cut in half and mounted on top to the existing hole of chassis, attach bracket#5 vertically to bracket#4. Then attach bracket#2 to bracket#5 and extend to the main frame. Adjust to the desired position, mark and drill to main frame. Please check for clearance before drilling See picture below.

Repeat the procedures for the remaining brackets.

Pictures shown below is for the driver side.



Pictures shown below is for the passenger side with A/C lines.



Tap blue and blk/red wires from the relay to the White and Orange wires on the courtesy light located on the driver side kick panel.

USE BRACKET# 1,2,5 FOR:

BUICK


02-07 Rendezvous

Chevy/GMC

07-09 Acadia

90-05 Astro/Safari (w/o rocker) **May require bracket#4 for extension.*

DRIVER SIDE SHOWN BELOW .

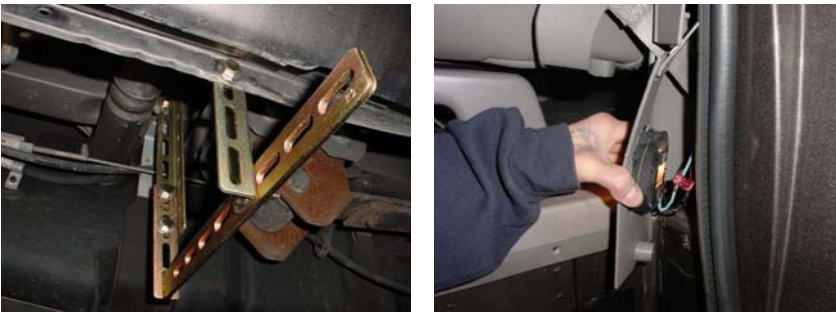

DOME LITE WIRE IS (-) BLUE, LOCATED ON THE DRIVER SIDE REAR PILLAR.

PASSENGER SIDE SHOWN BELOW.



04-06 Colorado/Canyon Crew Cab / Crew Cab Z71 (w/ flares)

04-07 Canyon Crew Cab (w/o flares)

04-08 Equinox

Chrysler

07-08 Aspen

Dodge

00-08 Dakota Quad Cab 4Dr (w/ flares)
2009 Journey
94-01 Ram Club/Quad/Sport Cab
02-08 Ram Quad Cab SLT New Body
2009 Ram 1500 Quad Cab

Ford

02-09 Explorer 4Dr **See instructions/pictures below.*

1. Remove bottom side rocker panel in order to install brackets.
2. Identify bracket #4, align and mount to the existing holes horizontally against the bottom of the chassis.
3. Identify bracket #5 and attach to bracket #4 by using supplied bolts and nuts, loosely tighten only.
4. Identify bracket #2 and shorten the bracket length by 1 1/2", attach it to bracket #5 and extend to the main frame.
5. With the door open, mark and drill 1 hole on the main frame at the desired location by holding the running board up where the rubber edge touches the bottom of the chassis, then adjust running board.
(Note: Before drilling, check and make sure there is absolutely no interfering wires, AC lines, brake lines, etc. in the drilling area.). Repeat step 2 through 5 for the remaining brackets.



Optional: dome light trigger can be found on passenger side pick panel (black/pink wire is + trigger).

Kia

2009 Borrego

Mazda

86-06 MPV (low clearance) **May require trimming brackets.*

Mitsubishi

2008 Raider Crew Cb

Mercury

93-02 Villager (low clearance)

Nissan

98-09 Frontier Crew Cab **May require cutting bracket#1&2 to length. Mount bracket#5 on outside pinch weld area (see picture below).*

98-09 Frontier King/Extended Cab (wheel-to-wheel)

93-02 Quest (low clearance) **May require trimming brackets.*

Pontiac

06-09 Torrent

Suzuki

2009 Equator Double Cab
07-08 XL-7

Toyota

00-09 Tacoma Double Cab

