



AR-S AMERICAN RUNNER STAINLESS RUNNING BOARD

Part #: 128085S VEHICLE BRACKET CONFIGURATION (03/2009)


USE BRACKET#1,2,3 FOR:

Ford

00-08 F-150 Super Crew 4Dr

Lincoln

02-08 Blackwood/Mark LT

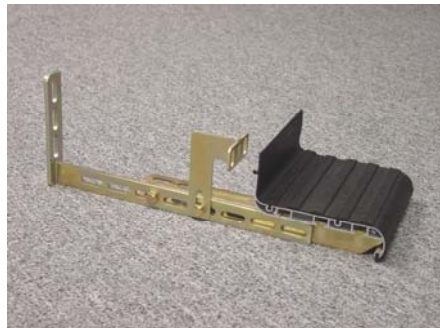

USE BRACKETS#1,2,5 FOR:

Chevy/GMC

04-06 Colorado/Canyon Crew Cab (w/o flares, wheel-to-wheel)

Chrysler/Dodge/Plymouth

2007 Caravan (low clearance)

94-07 Grand Caravan/Grand Voyager Long Wheel Base (low clearance)

2009 Ram 1500 Crew Cab (new body style)

98-07 Town and Country Long Wheel Base (low clearance)



Passenger side shown above. Note: Dome light wire colors are yellow(+) and black/blue(-) located at front dome light.

94-03 Voyager LWB (low clearance)

Ford

98-07 Windstar/Freestar SE/SES (low clearance)

Honda

98-09 Odyssey (low clearance) **Use bracket#4 for extension, may require trimming brackets.*



Wire location is behind radio bezel



Driver side shown above & next 2 photos.



Passenger side shown above & next 4 photos.



Hyundai

07-08 Entourage (low clearance)

Kia

2008 Sedona (low clearance)

Mercury

04-06 Monterey

Nissan

04-06 Armada (w/o mud flap)

Oldsmobile

98-05 Silhouette

Toyota

04-09 Sienna (low clearance)

00-06 Tacoma Double Cab (wheel-to-wheel)

95-06 Tacoma Ext Cab (w/o flares, wheel-to-wheel)

Volkswagen

99-04 Eurovan

