



## AR-S AMERICAN RUNNER STAINLESS RUNNING BOARD

Part #: 128088S VEHICLE BRACKET CONFIGURATION (03/2009)

### USE BRACKET# 1,2,3 FOR:

#### Buick

05-07 Terraza (low clearance)


#### Chevy/GMC

00-08 Silverado/Sierra 1500/2500/3500 Crew Cab 4 Dr

02-06 Trail Blazer EXT/Envoy XL/XUV (long wheel base)

#### Isuzu

05-06 Ascender 7-passenger

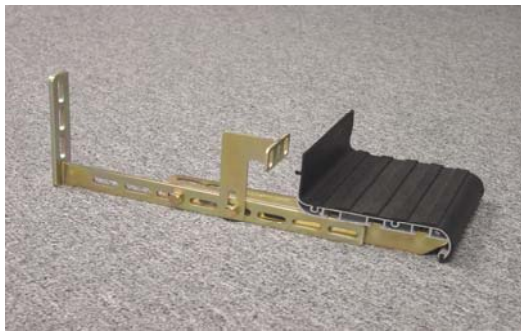

Driver side shown above.


---

### USE BRACKET #1,2,4

#### Ford


99-08 F250/350 Super Duty Crew Cab/Dually

Pictures shown below are for F250 regular cab

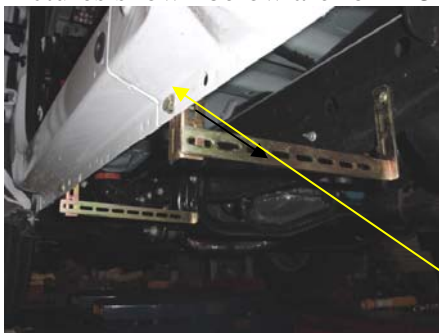

Bracket #4 is mounted to the existing factory holes shown here.

00-09 Ford Explorer Sport Trac 4Dr

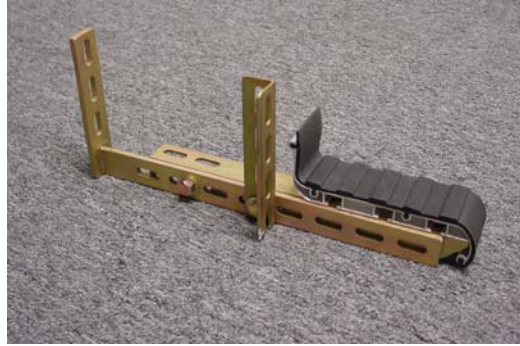

---

**USE BRACKETS# 1,2,5 FOR:**

**Chevy/GM**

00-05 Venture Long Wheel Base (low clearance)  
73-95 Full Size Van (long wheel base)  
05-08 Uplander (low clearance)

**Chrysler/Dodge**

08-09 Grand Caravan (low clearance)  
08-09 Town & Country LWB (low clearance)

**Ford**

84-00 Aerostar  
04-07 Freestar SES (low clearance/w/o mud flap)

**Mercedes Benz**

06-09 R Class (low clearance/may require extensive modification of brackets)

**Nissan**

03-09 Quest (low clearance)

**Pontiac**

05-06 Montana SV6 (low clearance)

**Saturn**

05-07 Relay (low clearance)



Configuration to mount on outside pinch weld.