



## **VOLCANO RUNNING BOARD**

**Part #: VOL100B / VOL100O**

**VEHICLE BRACKET CONFIGURATION (03/2009)**

**USE BRACKET# 1,2,3,5 FOR:**

### **Chevy/GMC**

96-09 Express/Savana Full Size Van (Regular Wheel Base)



Use bracket #1,2,3 on driver and passenger front and mounted at an angle. See above.



Use bracket #1,2,3 for the remaining installation on driver side only. See above.



Use bracket #1,2,5(2) for the remaining installation on the passenger side only. See above.

---

**USE BRACKET #1,2,5**

### **Dodge**

2009 Ram 1500 Crew Cab (short wheel base wheel-to-wheel)

2009 Ram 1500 Quad Cab (wheel-to-wheel)


06-08 Ram Mega Cab

07-08 Ram Quad Cab SLT New Body Style (wheel-to-wheel)

03-08 Sprinter Wagon 140"/144" wheel base

**Ford**

92-09 Full Size Van

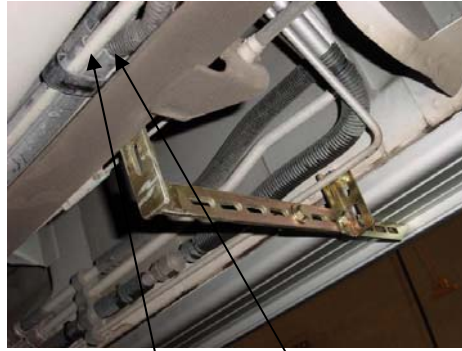

When installing bracket #2 to main frame, check for clearance of AC lines, brake lines etc. behind the main frame before drilling.

**Toyota**

07-08 Tundra Double Cab (long bed wheel-to-wheel)