

INSTALLATION INSTRUCTIONS

For Additional Support Brackets

ONKI MODULAR BRUSH GUARD – PART # 243230/462999
2007+ CHEVY SILVERADO HD
2007+ GMC SIERRA HD

Parts List *(Please check that you have all the parts listed below before you start installing)*

Quantity	Description
2	Additional support brackets
2	Self-tapping bolts
2	½" Washers
2	Lock washers

Installation of Additional Support Brackets

1. The brush guard must already be fully installed and assembled on the vehicle with all nuts and bolts fully tightened to determine the final location of the brush guard with respect to the vehicle.
2. Open the hood of the vehicle and remove the plastic center cover in the front and top of the radiator area (Photo # 1).

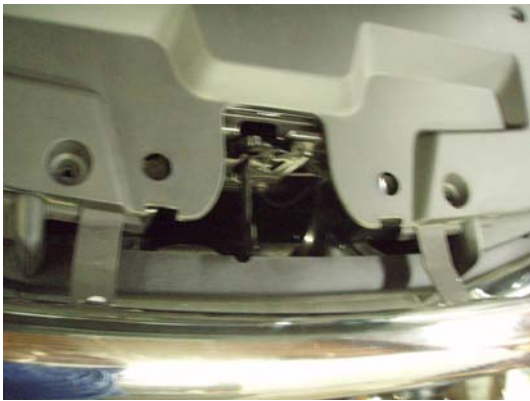


Photo # 1



Photo # 2

3. Remove the original bolts on either side of the hood latch. Install the additional support brackets as shown on Photo # 2 using the original bolts. Do not fully tighten these bolts. Place the tab portion of the additional support brackets against the top center tube of the brush guard. Adjust the additional support brackets accordingly to get a flush contact with the top center tube of the brush guard. Mark the center of the hole to be drilled on the top center tube of the brush guard. Use no bigger than a ¼" drill bit to drill the pilot holes on the top center tube. (NOTE: The size of the pilot hole will be smaller when opting to use a pop rivet instead of the supplied self-tapping bolts.)
4. Install the additional support brackets onto the top center tube by using the provided self-tapping bolts, lock washers, and washers.
5. Fully tighten the original bolts and self-tapping bolts.
6. Reinstall the plastic center cover.

**For technical support, please call
1-510-567-8875**