

# INSTALLATION INSTRUCTIONS


**ONKI MODULAR BRUSH GUARD – PART # 462433**  
**00-02 GMC Sierra 2500/3500 HD**  
**00-06 GMC Yukon XL ¾ Ton**

**Parts List** *(Please check that you have all the parts listed below before you start installing)*

Quantity	Brush guard installation hardware
2	Mounting brackets
2	1 ½" x 2 ½" threaded washer plates
10	M12X40 (19mm hex head bolts)
6	M12 Nylon lock nuts (19mm socket nuts)
20	½" SAE washers

## Installation of Mounting Frame Brackets & Brush Guard

1. Identify the left and right brackets to be used (D for driver side / P for passenger side).
2. Remove outside tow hook bolt.

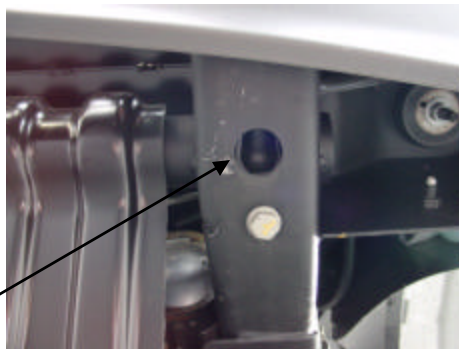

3. Insert the 1 ½" x 2 ½" mounting plate with the wire attached, enter from the front of the main frame (above tow hook) to the existing 1 ¼" hole on the bottom of the main frame.
4. Attach and align the bracket on the bottom of the main frame at the tow hook location, loosely reinstall removed tow hook and the supplied M12X40 hex bolt and washer thru the bracket on the side and the bottom of the tow hook.
5. Repeat step 2 thru 4 on the opposite side.
6. With the help of another person, align and position the Brush Guard onto the installed brackets and securely tighten with the supplied M12X40 hex bolts, washers, and nuts.
7. Finally, make sure all nuts, bolts and brackets are tightened.

**For technical support, please call**  
**1-510-567-8875**